

Nemesis

A COMPUTER ASSISTS YOU WHEN MOORING AND ANCHORING

- ▶ **Transceiver wireless remote control** with intuitive touch keyboard
- ▶ **25 transmission channels** on 2 bands for maneuvers in absolute safety
- ▶ Engine management, directional thrusters, winch/winchers, anchor/anchors
- ▶ Optional: **acceleration** (if allowed)
- ▶ **Proportional thrusters** management (if allowed)
- ▶ **Automatic mode:** management of multiple functions with a single button
- ▶ **Joystick** emulator
- ▶ **Vibration** for attention warnings
- ▶ **Wireless** charging
- ▶ **Wi-Fi connection** for smartphones, PCs and/or tablets
- ▶ Connection to the latest generation of **chartplotters**
- ▶ **Remote Wi-Fi:** assistance, installation and upgrades through VPN



Linux operating system

- ▶ **Installation via Wi-Fi:** connection for smartphones, PCs and/or Tablets
- ▶ **Connection via VPN** for upgrades, assistance, or adding options directly from YACHT CONTROLLER Headquarters without uninstalling the device or having a technician on board
- ▶ **Customization** of the Acceleration Profiles (Optional)
- ▶ **Customization** of the automatic mode (Optional)
- ▶ **Customization** of the parameters of the proportional propellers (Optional)
- ▶ **Second Wi-Fi** (Optional)
- ▶ Pairing with several transmitters
- ▶ **Watertight transmitter and receiver**

Nemesis

CUSTOMIZABLE REMOTE CONTROL FUNCTIONS



Linux operating system

- 1 2 Right or left bow thrusters activation (*Manual*) or slow rotation clockwise or counterclockwise (*Joystick emulation*) with engines only
- 3 4 Right or left stern thrusters activation (*Manual*) or fast rotation clockwise or counterclockwise (*Joystick emulation*) with engines and thrusters
- 5 Left engine forward (*Manual*) or translation forward left (*Joystick emulation*)
- 6 Right engine forward (*Manual*) or translation forward right (*Joystick emulation*)
- 7 Left engine reverse (*Manual*) or translation reverse left (*Joystick emulation*)
- 8 Right engine reverse (*Manual*) or translation reverse right (*Joystick emulation*)
- 9 Simultaneous activation of the right and left engines forward
- 10 Simultaneous activation of the right and left engines reverse
- 11 Walk boat to port: Simultaneous activation of bow and stern thrusters to port side
- 12 Walk boat to starboard: Simultaneous activation of bow and stern thrusters to starboard side
- 13 Expansion (*horn, DPS, lighting, etc.*)
- 14 Selection key of anchor or auxiliary outputs
- 15 Right Anchor Up/Down or auxiliary outputs (*Optional*)
- 16 Left Anchor Up/Down or Auxiliary Outputs (*Optional*)
- 17 Automatic/Manual mode
- 18 Acceleration profiles (*max 5 steps*)
- 19 On/off/ Engage button

CONNECTIONS VIA
PC, SMARTPHONE, TABLET AND
CHARTPLOTTER



Nemesis

DUAL BAND+
next gen

en-joy+
next gen

JCS+
next gen

